



ZigBee Dim Remote

09.ZG2819S.04841

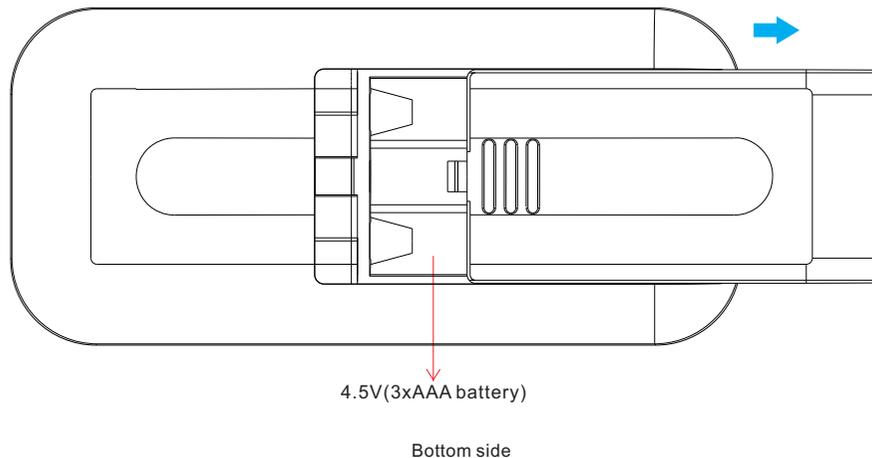


Important: Read All Instructions Prior to Installation
Function introduction

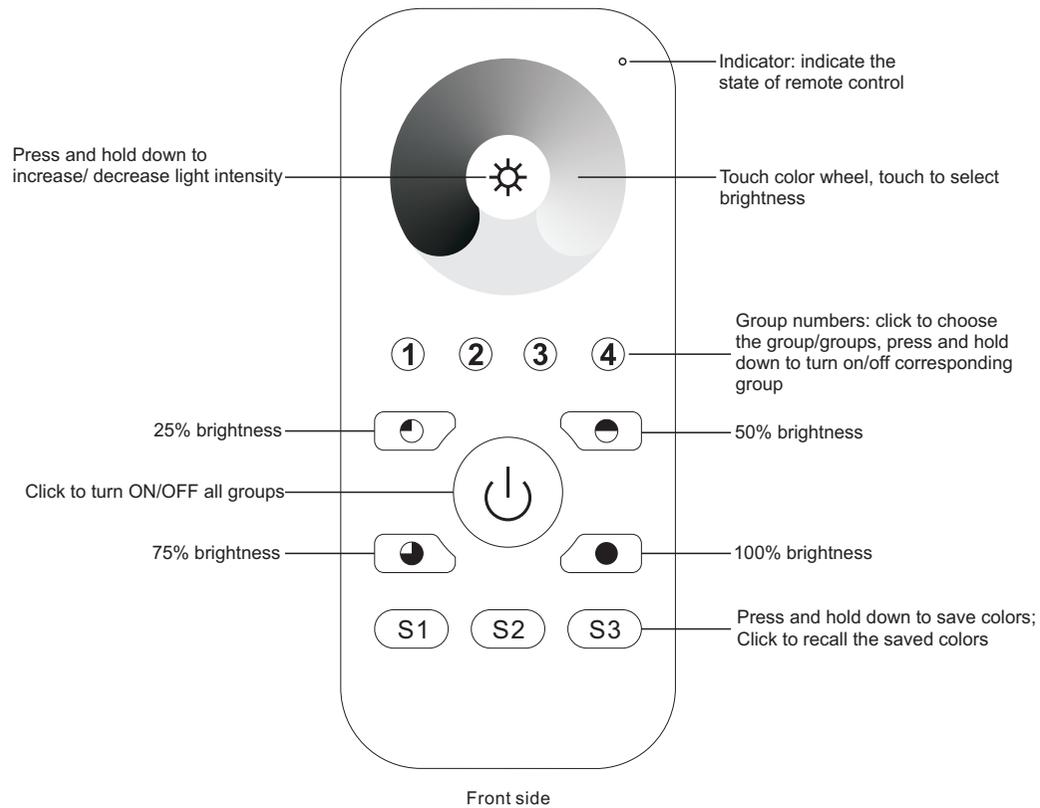

Product Data

Protocol	ZigBee 3.0
Operation Voltage	4.5V(3xAAA battery)
Transmission Frequency	2.4GHz
Transmission Range (free field)	30m
Protection Type	IP20
Dimming Range	0.1%-100%
Dimension	120x55x17mm
Protection Grade	IP20

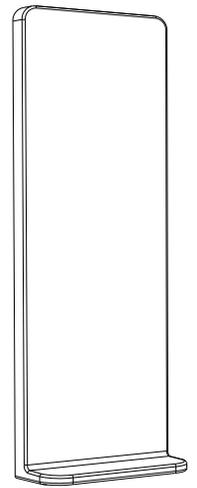

Magnetic Bracket

- ZigBee Dim remote based on ZigBee 3.0
- Enables to control single color lighting devices
- High sensitive & high stable touch color wheel, fast & precise color control
- Battery powered remote with low power consumption
- Enables to pair ZigBee lighting devices through touchlink commissioning
- Supports find and bind mode to pair with ZigBee lighting devices
- Supports 4 groups for binding max. 30 lighting devices
- 2.4 GHz global operation
- Transmission range up to 30m
- Compatible with universal ZigBee Gateway products
- Compatible with universal single color ZigBee lighting devices

Safety & Warnings

- This device contains AAA batteries that shall be stored and disposed properly.
- DO NOT expose the device to moisture.

Operation

1. This ZigBee Dim remote is a wireless transmitter that communicates with a variety of ZigBee compatible systems. This transmitter sends wireless radio signals that are used to remotely control a compatible system.

2. This ZigBee remote supports 4 groups for binding max. 30 lighting devices and enables to control single color ZigBee lighting devices.

3. ZigBee Network Pairing Through ZigBee Coordinator (Added to a ZigBee Network)

- 1) Before pairing, please make sure that the remote does not belong to any ZigBee network. If yes, please first remove it from the network, otherwise network pairing will fail.
- 2) From your ZigBee Controller or hub interface, choose to add device and enter Pairing mode (Add device) as

instructed by the controller.

- 3) Press and hold down  key until the LED status indicator turns on, then immediately short press **S1** button to enable the remote to search nearby network, LED indicator will flash every 1 second. 20 seconds timeout if there is no network, the indicator will turn off, repeat the operation.
- 4) Network Pairing Begins Automatically: LED indicator on the remote blinks 6 times quickly as it scans for a compatible network controller to pair with.
- 5) After the remote is paired to the ZigBee network, the indicator will stop blinking and turn off, then the remote will appear in your controller's menu. (For Philips Hue bridge, no remote information will appear on APP menu)
- 6) The remote is now paired to the ZigBee network.

4. How to Check Whether the Remote Belongs to a Network or not

Activate the remote by clicking All On/Off button (indicator on), then short press any other buttons except group buttons, indicator blinking 3 times means the remote does not belong to any network, blinking once or twice means it has already been added to a network.

5. Pair to a ZigBee Lighting Device Through TouchLink Pairing

- 1) The remote can pair to a ZigBee lighting device through Touchlink pairing and control the device.
- 2) Directly TouchLink pairing with a device without Hub or TouchLink pairing after the remote and device are added to the same ZigBee network.
- 3) Start TouchLink Commissioning of the ZigBee lighting device, please consult its manual to learn how.
- 4) Bring the remote within 10cm of the ZigBee lighting device.
- 5) Short press a group button 1/2/3/4 to choose a group that you would like to pair the device to.
- 6) Press and hold down  key until the LED indicator on the remote turns on.
- 7) Short press button **S2** to start TouchLink pairing procedure of the remote.
- 8) The LED indicator will flash fast for 3s to start TouchLink and then flash 6 times slowly to indicate successful pairing to the device.

- Note: 1) Directly TouchLink (both not added to a ZigBee network), each remote can pair with 30 devices.**
2) TouchLink after added to a ZigBee network, each remote can pair with max. 30 devices.
3) For Philips Hue & Amazon Echo Plus, add remote and device to network first then TouchLink.
4) Philips Hue lights will enable TouchLink Commissioning after re-powered on.

6. Form a Zigbee Network & Add Devices to the Network (No Coordinator Required)

- 1) The remote can form a zigbee network through Touchlink pairing without coordinator and add other devices to the network.
- 2) Factory reset the remote and the lighting device to remove them from previous network if any (please refer to their manuals).
- 3) Start TouchLink Commissioning of a ZigBee lighting device, please consult its manual to learn how.
- 4) Bring the remote within 10cm of the ZigBee lighting device.
- 5) Short press a group button 1/2/3/4 to choose a group that you would like to pair the device to.
- 6) Press and hold down  key until the LED indicator on the remote turns on.
- 7) Short press button **S2** to start TouchLink pairing procedure of the remote.
- 8) The LED indicator will flash fast for 3s to start TouchLink and then flash 6 times slowly to indicate successful pairing to the device, which means a zigbee network is formed by the remote and the lighting device.

- 9) Short press button **S1** to enable the remote to discover and add devices, LED indicator will flash twice. 180 seconds timeout, repeat the operation.
- 10) Set another remote into network pairing mode and pair it to the network. (please refer to its manual)
- 11) There shall be indication on the remote while added to the network successfully.
- 12) Add more remotes to the network as you would like.
- 13) Factory reset the lighting devices that you would like to add to the network to remove them from previous network. (please refer to their manuals)
- 14) Touchlink to pair the added remotes to the lighting devices you would like to add, the devices will be added to the network through Touchlink pairing. (please refer to their manuals)

Note: Each remote can Touchlink pair max. 30 devices to add them to the network.

7. Remove a Touchlink Paired ZigBee Lighting Device Through TouchLink Removing

- 1) The remote can remove a Touchlink paired ZigBee lighting device through Touchlink removing.
- 2) Start TouchLink Commissioning of the paired ZigBee lighting device, please consult its manual to learn how.
- 3) Bring the remote within 10cm of the ZigBee lighting device.
- 4) Short press the group button 1/2/3/4 to choose the group that the device was paired to.
- 5) Press and hold down  key until the LED indicator on the remote turns on.
- 6) Short press button **S2** twice to start TouchLink removing procedure of the remote.
- 7) The LED indicator will flash fast for 3s to start TouchLink removing and then flash 6 times slowly to indicate successful removing of the selected device.

8. Factory Reset A Lighting Device Through The Remote (Touch Reset)

- 1) Make sure the lighting device is added to a network, the remote can be added to the same network or does not belong to any ZigBee network.
- 2) Start TouchLink Commissioning of the ZigBee lighting device, please consult its manual to learn how.
- 3) Bring the remote within 10cm of the ZigBee lighting device.
- 4) Press and hold down  key until the LED indicator on the remote turns on.
- 5) Short press button **S2** 5 times continuously to start Touch Reset of the remote.
- 6) The LED indicator will flash fast for 3s and then flash 3 times slowly to indicate successful reset of the device.

- Note: 1) Suitable for those light devices without manual reset function (Philips Hue lights).**
2) Only recommended when ZigBee Hub is missed or inoperable, reset from Hub is impossible.

9. Battery Power Monitor Function, the remote will report battery power value to the coordinator under following situations:

- When powered on.
- When short pressing both **S2** and **S3** buttons simultaneously.
- When operating the switch to send data packets (over 4 hours since last operation).
- When added to the network by a coordinator.

10. Pair with A ZigBee Lighting Device Through Find and Bind Mode

- 1) Start find and bind mode on the ZigBee lighting device (initiator node) and enable it to find and bind target, please consult its manual to learn how.

- 2) Short press 1/2/3/4 to choose a group that you would like to bind the device to.
- 3) Press and hold down  key on the remote until the LED indicator turns on.
- 4) Short press button **S3** to enable the remote (target node) to find and bind initiator.
- 5) The binding will be successful within 4 seconds, and LED indicator on the remote will flash 4 times. If binding fails, LED indicator will flash twice.

11. Unpair with A ZigBee Lighting Device Through Find and Bind Mode

- 1) Start find and bind mode on the ZigBee lighting device (initiator node) and enable it to find and unbind target, please consult its manual to learn how.
- 2) Short press 1/2/3/4 to choose the group that the device already bind to.
- 3) Press and hold down  key on the remote until the LED indicator turns on.
- 4) Short press button **S3** twice continuously to enable the remote (target node) to find and unbind initiator.
- 5) The unbinding will be successful within 4 seconds, and LED indicator on the remote will flash 4 times. If unbinding fails, LED indicator will flash twice.

12. Clear All Paired Lighting Devices of a Group Through Find and Bind Mode

- 1) Short press button 1/2/3/4 to choose the group that you would like to unbind all devices.
- 2) Press and hold down  key on the remote until the LED indicator turns on.
- 3) Short press button **S3** five times continuously to clear all bind lighting devices with this group.
- 4) LED indicator on the remote will flash 4 times to indicate successful unbinding.

13. Binding Between the Remote and Devices Through Coordinator (Hub or Controller Interface)

- 1) Once the remote and lighting devices are paired to the same network, short press any button to activate the remote, then from your ZigBee controller or hub interface, choose to bind devices to the remote as instructed by the controller. Then the devices can be controlled by the remote.
- 2) Once the binding operation is done between the remote and ZigBee lighting devices, the remote can still control the devices in the event of gateway/coordinator loss.

Note: 1) This remote supports 4 groups for binding max. 30 light devices.

2) Philips Hue & Amazon Echo Plus do not support this function, please use TouchLink to bind.

3) Each group can bind max. 30 devices, or bind 30 devices to 4 different groups.

14. Unbinding Between the Remote and ZigBee Lighting Devices

To unbind the remote and ZigBee lighting devices, first short press any button to activate the remote, then from your ZigBee controller or hub interface, choose to unbind the device from a remote as instructed by the controller.

15. Factory Reset the Remote (Removed From a ZigBee Network)

From the ZigBee Controller or Hub Interface

From your ZigBee controller or hub interface, choose to remove or reset the remote as instructed. The LED

indicator on the remote will turn on and flash 3 times quickly to indicate successful reset to factory default setting.

Manual

Press and hold down  key until the LED indicator on the remote turns on -> immediately short press  button 5 times continuously -> Indicator flashes 3 times quickly to indicate successful removal from the network and reset to factory default.

Note: All configuration parameters will be reset after the remote is removed from the network.

16. ZigBee Clusters Supported by This Remote Are As Follows:

Input clusters:

- Basic
- Power Configuration
- Identify
- Diagnostics

Output clusters:

- Identify
- Group
- Scene
- On/off
- Level control
- Ota